

HOW TO REPLACE THE BATTERY

1. Check the type of back cover

Screw-in type



Screwed type



Snap-on type (A)



Snap-on type (B)



Snap-on type (C)



2. Removing the back cover

With the Adjustable Case Opener, turn the back cover counter-clockwise.



Using a screwdriver, remove the screws from the back cover.



Protect the back cover with a piece of tape before removing. Insert Opener A in the recess and move from side to side to make a gap between the cover and the case. Then use the opener to pry off the cover.



Fit Case Opener B into the notch and pry open the back cover.



Insert Opener B into a gap between the two hooks, and pry open the back cover.



*Avoid inserting the case opener at the hook position, of the case may be damaged.

3. Replacing the battery

Screw Type: Using a screwdriver, remove screw(s) from the battery holder.
Hook Type: Use a thin flat blade jeweler's screwdriver to pull hook on one side of the battery holder and remove the holder.



Then replace dead battery(s) and attach the battery holder.

CAUTION

- Avoid touching the contact (-) of the battery.
- Never hold the contacts with metallic tweezers.
- Work carefully so that the components inside the watch do not pop up.

4. AC (ALL CLEAR)

As shown below, touch the AC contact and the battery (+) side with metallic tweezers. Contact should be about 2 seconds.

IMPORTANT

- Contacting AC (ALL CLEAR) is necessary, when a new battery has been put in because the memories/counters may cause erratic displays.
- On some models, pushing the light button will turn on the display.



5. Fitting the back cover

Using the Adjustable Case Opener, tighten the back cover.



Tighten the screws, using a screwdriver.



Place the watch on a hand press and push the back cover in gently.



Hold the watch horizontally and snap-fit the back cover.



DEGREE OF WATER RESISTANCE OF WATCHES

Please familiarize yourself with CASIO's case designations, so you can recommend the watch most suitable to a customer's needs.

CASE DESIGNATION	EXAMPLES OF USE	
	SUITABLE	UNSUITABLE
WATER RESISTANCE	<p><i>Wearable while water is being splashed but not under any pressure.</i></p>	
50M WATER RESISTANCE	<p><i>Wearable around sinks, during swimming, athletic sports, in shallow waters, but not while snorkeling or scuba diving.</i></p>	
100M WATER RESISTANCE	<p><i>Wearable around sinks, during swimming, poolside diving, snorkeling, but not while jet-skiing or scuba diving.</i></p>	
200M WATER RESISTANCE	<p><i>Wearable around sinks, during swimming, snorkeling, jet-skiing, but not while scuba diving.</i></p>	
DIVER'S WATCH 200M	<p><i>Wearable while scuba diving at depths not requiring helium gas.</i></p>	

*Only watches marked with the words "DIVER'S WATCH 200M" can be worn while scuba diving (with air tanks).

**Even if a watch is water-resistant, do not operate its buttons or crown while it is submerged in water or wet.

However, "DIVER'S WATCH 200M" casing models permit underwater button operation.

***After submersion in seawater, use plain water to rinse all salt and dirt from the watch.

****Even if a watch is water-resistant, avoid wearing it in the bath or in area where detergents (soap, shampoo, etc.) are being used. Such conditions can reduce water resistance.